

Water ProofTV



TVIF701

User Manual

Index

Specification.....	01
Installation Instructions.....	02–04
Speaker Installation Guide.....	05
Cabling.....	06
Remote Control.....	07–09
MENU Adjust Settings.....	10–11
DVB-T function.....	12–24
Cable Schematic.....	25
Trouble Shooting.....	26
General Precautions.....	27
Accessory.....	28


Accessory

1. Waterproof remote control
2. Wall plugs x 8 and Screws x 8
3. User manual
4. Adaptor
5. Extention Cable
6. Ceiling Speakers


Specification

ITEM	Specification
Screen size	7 inch
Display Resolution	480(H) × 3(RGB) × 234(V)
Brightness(Typ.)	300(cd/m ²)
Contrast Ratio(Typ.)	300
Viewing Angle(Typ.)	Horizontal=140° Vertical=135°
Video source	Video input x1(NTSC/PAL/SECAM) Analog TV DVB-T
Speaker	5w
Power input	DC 12V__2A
Weight	0.6kg±50g
Dimension	227(L)x158(H)x54(D) mm
Certification	CE IP67

Installation Instructions

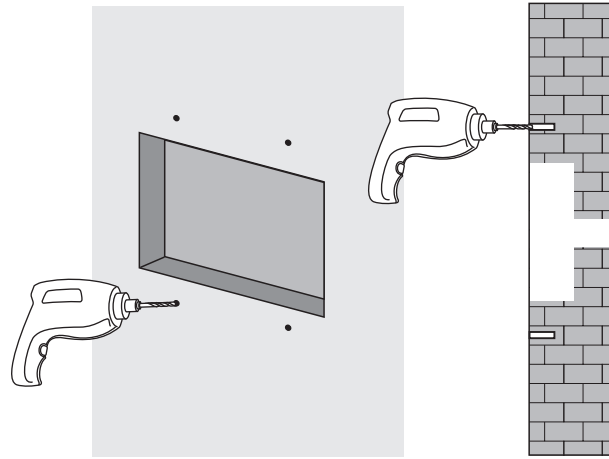

STEP 1
Cut a hole in the wall in order to house the back of the units and drill fixing notes.

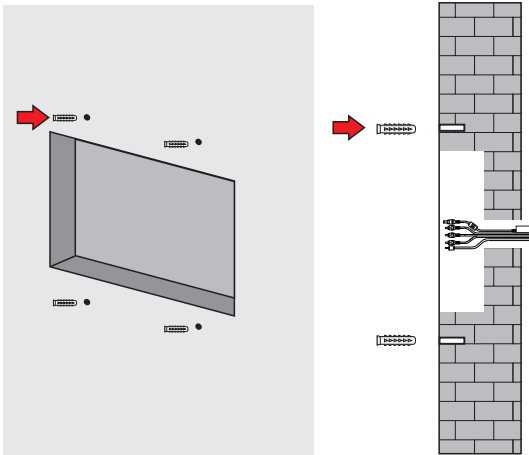

STEP 2
Plug the screw holes and feed the required leads to the back of the unit.


General Precautions

1. Do not add any parts or use any accessories not provided from the manufacturer.
2. Temperature. (Storage 0~50, Operating 0~60) degrees C.
3. Please replace the remote battery immediately when it runs out. The life of battery is one year.(approx)
4. The TV is waterproof rated IP67. This is fully waterproof, however, we would not suggest submerging in water.
5. Clean the unit with a soft damp cloth. Do not use abrasive substances or materials that could scratch the glass panel.


Trouble Shooting

Check that all cables are securely fastened, that you have connected to an aerial feed or chosen AV source and that the unit is switched on.

General Problem	Suggestion & Improvement
No Signal	When first switched on this warning will display. Only when you have tuned the TV in will the TV work.
TV switches off	The TV will automatically switch off if there is no source connected and it receives no instructions from the operator. eg; If watching a video, press play on the video shortly after turning on the TV or it will switch off.
I cannot tune into all channels	This is not a fault of the TV. For all reception problems a qualified aerial installer should be consulted.
No Video Display	Ensure that the video signal cable is correctly connected to monitor and source. The system supports three input signals. Check the Monitor display is in the right input signal. Check input sources (e.g. VCR, etc.) function normally.
No Audio Output	1. Ensure that the video signal cable is correctly connected to Monitor and source. 2. Check the audio signal is connected with "Audio in" switch correctly. 3. Check audio control is MUTE OFF.
Right-Left-Audio-Output Error	Check if the audio signal cable is correctly connected to the Right-audio-In and Left-audio-In.

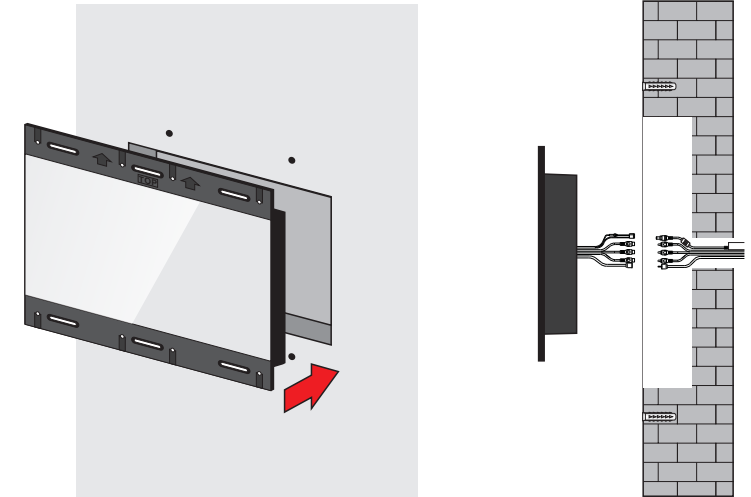


STEP 3
Connect up the leads from the back of the unit.


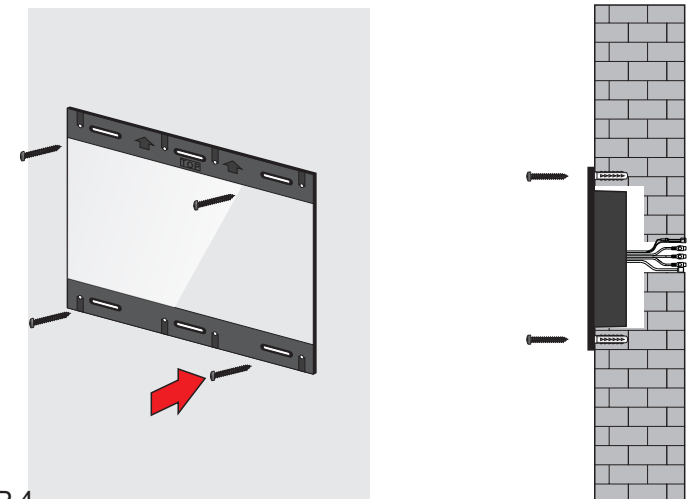


STEP 4
Apply a bead of silicone to the back of the unit and screw the unit into place.

Cable Schematic

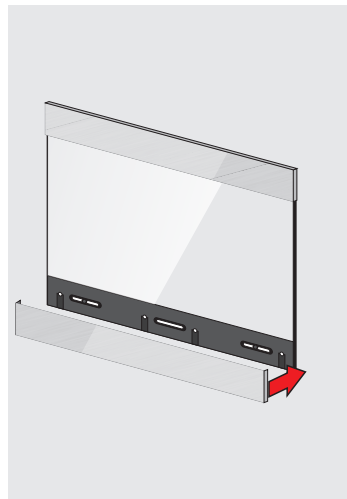

STEP 5
Fix the decorative screw hole covers

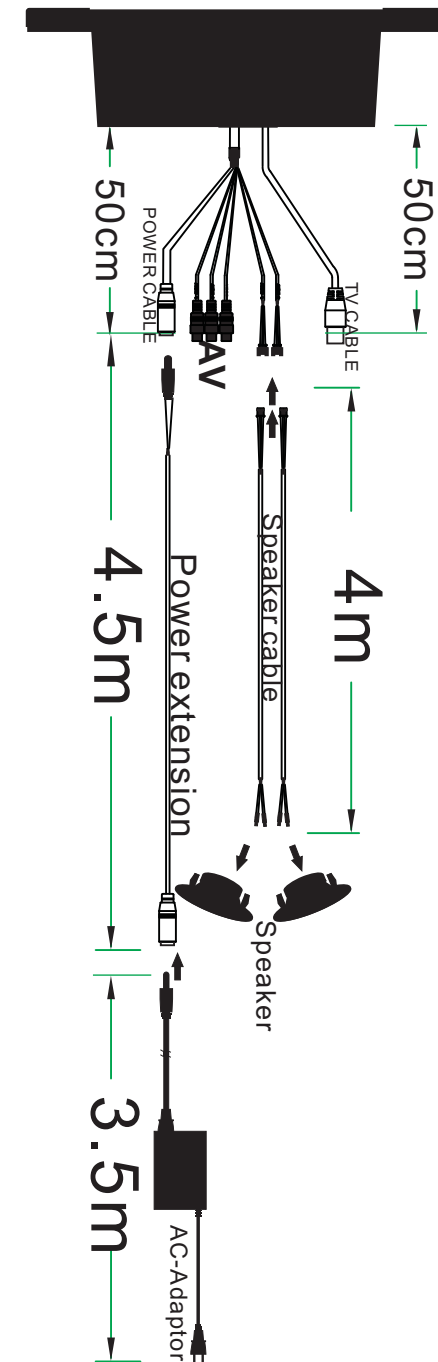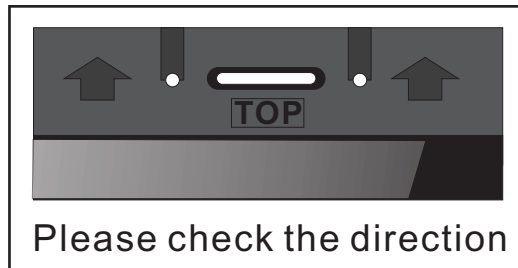

■ Electronic programs guide(EPG)

(1) You can press key “EPG” on the remote control to enter into the EPG page to know more about the programs to be played. As shown in the figure below:

Enter into EPG menu default enter Daily Mode, menu under this mode contain 7 parts, As shown in the figure above:

[1]. Tab 1 shows the Title.
[2]. Tab 2 shows time and date list.
[3]. Tab 3 shows particular date list.
[4]. Tab 4 shows program list, press “UP/DOWN” to switch between programs.
[5]. Tab 5 shows the time range and program information, press “F.R & F.F” circularly to choose to browse the time range and program information on basis of days of every week.
[6]. Tab 6 shows the detailed program information in Tab 5.
[7]. Tab 7 shows hint information for keys, corresponding to the four colors on the remote controller: replace with colors RED, GREEN, YELLOW, BLUE.

[8]. Press “LEFT/RIGHT” to switch between Tab 4 and Tab 5.

(2) Press “GREEN” key to enter into Weekly Mode to display the programs and program information in different time ranges of the current program list within one week.



[1]. Press F.R & F.F key to switch between Sunday ---Saturday in Tab 3.

[2]. Press UP/DOWN key to move upward and downward to switch between the different programs in Tab 5.


[3]. Press LEFT/RIGHT key to choose to view the program information in different time ranges in Tab 6.

(3) When the cursor stops on Tab 5 in Figure 3.6 Tab 6 in Figure 3.7, press the “YELLOW” key to choose the detailed information corresponding to the current program.


(4) When the cursor stops in Tab 5 of Figure 3.6 and Tab 6 of Figure 3.7, press the “BLUE” key to enter Wakeup Timer menu to book programs Press “EXIT” to exit from EPG.

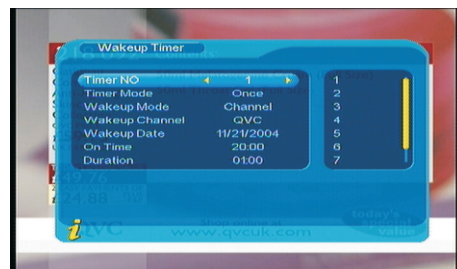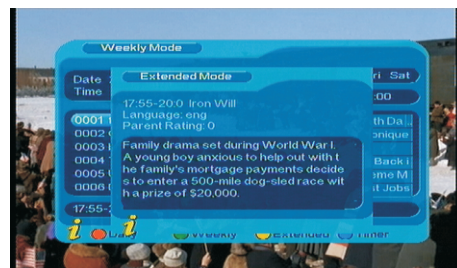


Speaker Installation Guide

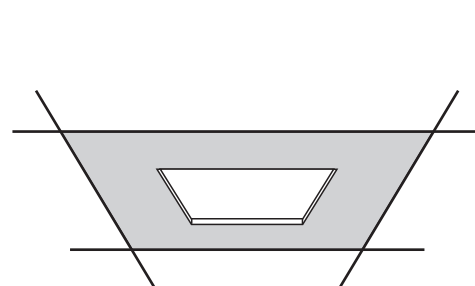


(1) Cut out a recess for the speaker of 144x115mm.

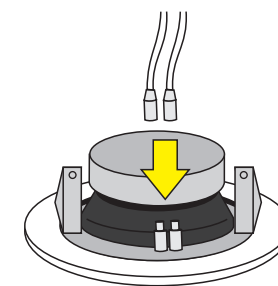


(2) Check cables are correctly connected.

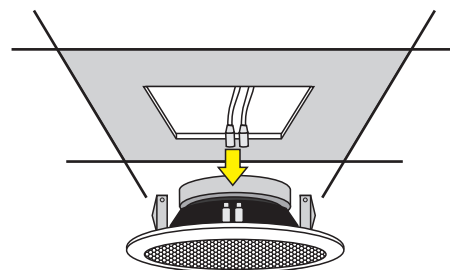

(3) Feed Cables from TV.

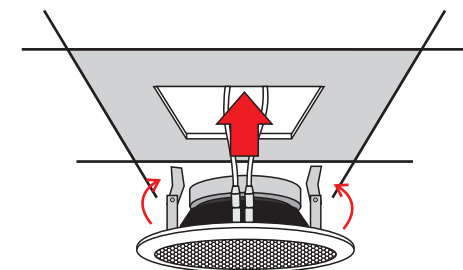

(4) Push back wire clips and slide speaker into place.

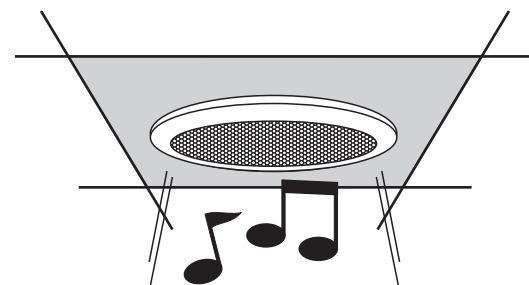


(5) Finished.

Cabling

Please note: All electrical installation should be carried out by a fully qualified Electrician and all fire and safety regulations should be obeyed.

The TV requires a 13amp socket outlet connected to a 240V mains supply via a readily accessible isolation switch mounted in close proximity to the unit. Both the socket and pull switch must conform to the latest safety specification and be protected via and RCCD device or similar. This socket must be fitted in a dry area away from any moisture.

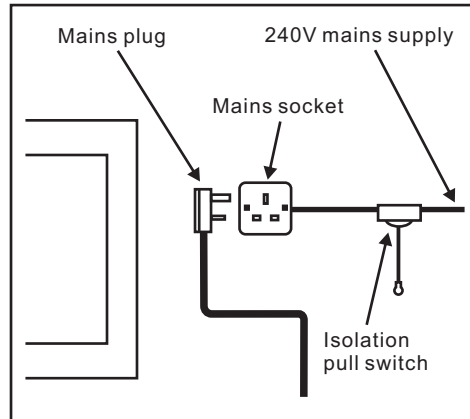

The cabling and adaptor plug supplied with this TV must not be cut, shortened, lengthened, etc. as this could potentially damage the unit.

TV Aerial:


Take a 75Ω feed from your present television aerial or distribution system and connect this to the COAX connection at the back of the unit. The signal level fed to the set must be at least 60dB/1millivolt or the picture may be noisy. A TV Distribution Amplifier may be required if you are in an area of weak signal or if other televisions are already being fed from the same aerial. If in doubt, consult a qualified aerial technician.

Cleaning:

To clean the front screen use only a soft damp cloth. Under no circumstances are abrasive cleaners to be used. Failure to observe this warning will invalidate your guarantee.

Version

Factory use only.

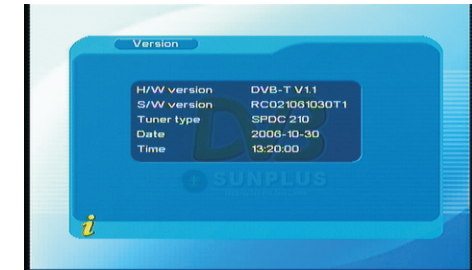

■ Games

Available Games

Box Man

There are six function selection menus on the left of the interface for user:
 New Game: Restart game.
 Reset: reset map.
 Continue: Continue game.
 Level: Display game level.
 Help: offer help information.
 Exit Game: exit game.



Tetris

There are five function selection menu on the left of the interface for user:
 Start Game: Start Game.
 Setting: set game speed and difficulty
 Help: provide game information.
 Score List: score list.
 Exit Game: exit the game.



Hit Rat

There are five function selection menu on the left of the interface for user:
 New Game: Restart Game.
 Speed: Set Game Speed, Press LEFT/RIGHT key to set.
 Score List: score list;
 Help: help information.
 Exit Game: exit the game.



Remote Control

POWER

LCD monitor power button (On/Off).

Mute

Mute setting.

MEDIA MENU

Switching DVBT MENU.(DVBT mode)

DISPLAY

Switching the current information sources.

SLEEP

No function.

INPUT

Switching the input source.

MENU

Used to access menu options for picture quality adjustment, channel scan, and return to original factory settings.

EXIT

To return to previous status or exit.

left/up/down/right
 move the left/up/down/right item in the menu.

OK

Select an item or confirms a choice. List will enter the channel manager.

PMODE

No function.

SMODE

No function.

VOLUME + -

Increase / decrease volume.

CHANNEL ^ v

Change channels sequentially up or down in viewing mode.



EPG

Electronic Program Guide.(DVB-T mode)

LANG(language)

No function.

TV/RADIO

Switches between TV and RADIO. (DVB-T mode)

SIZE

Select the 4:3 or 16:9.

Number Keys(0~9)

For direct entry of channel number or input of alphanumeric characters System Information.

RETURN

Goes back to the previously viewed channel.

INFO

Displays information on viewed channel. (DVB-T mode)

FAV

Select the favorite or all TV channels.(DVB-T mode)

FAV+

change channels sequentially up in viewing mode.(DVB-T mode)

FAV-

change channels sequentially down in viewing mode.(DVB-T mode)

RED/GREEN/YELLOW/BLUE


DVBT mode Special.



Wakeup Timer

If you want to set channel playing at certain time or giving some hint information such as Birthday. You can set via Wakeup Timer menu, as shown in Figure 4.32


In Wakeup Timer menu, you can set Timer No: set Wakeup event number, the system can support at most 8 events, Timer Mode: set time mode, Wakeup Mode: set wakeup mode, Wakeup Messag: set wakeup message, Wakeup Channel: set wakeup channel name , Wakeup Date: set wakeup date, On Time: set wakeup time, Duration: set duration.

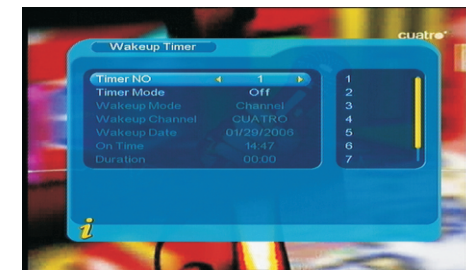

Parental Lock


You can revise system Password, you can via menu (MENU>Digital TV>Configuration > Parental Lock) to enter Parental Lock menu.

(1)Press the 0-9 number key on the remote controller to input old Password, the system defaults Password as“0000”.
(2)If the password is input correctly, the cursor can move onto Input New Password option, press0-9 number key on the remote controller to input new 4-digit Password;
(3)The cursor move Confirm New Password option, press 0-9 number key press on the remote controller to input new 4-digit Password; if it is confirmed the new password is different from the new Password input, the system will hint to input new password again, until they are consistent. After the password is set successfully, the system will hint the success and save the setting, and the new password will come into effect.

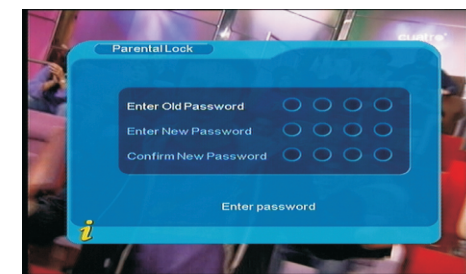

Software Upgrade

For factory use only.

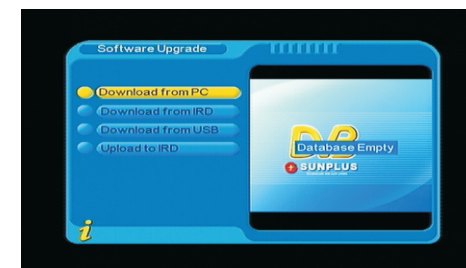


System Setup

System Setup menu can provide convenient system setup, you can via menu (MENU->Digital TV->Configuration -> System Setup) enter System Setup menu

EQ setting
To set output sound effect, can be set as Standard, Classic, Rock, Jazz, POP

Surround
To set stage effect, can be set as OFF, Concert, Church, Passive, Live

Area
To set scanning area and, choose area to download preset channel settings, Germany/ England/ Italy/ France/ Spain/ Holland/Taiwan/China/Norway/Sweden/Finland supported, depending on different version.



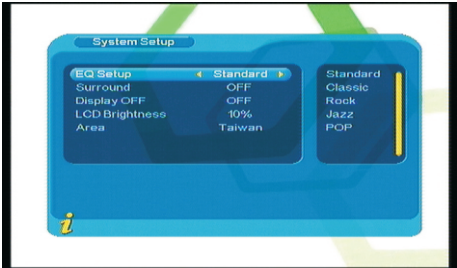


Time


Via menu (MENU>Digital TV>Configuration>Time)

You can set Timer Mode in Time page: Timer Mode: set time mode, Date: set date, Time: set time, GMT Offset: set GMT Offset, Summer Time: set summer time.

In Time menu, there are two time modes, one is Auto setting: revise via setting GMT Offset, Summer Time options; the other is Manual setting: revise via setting Date, Time options. When the cursor moves onto Timer Mode option, Press LEFT/RIGHT key to choose time mode.

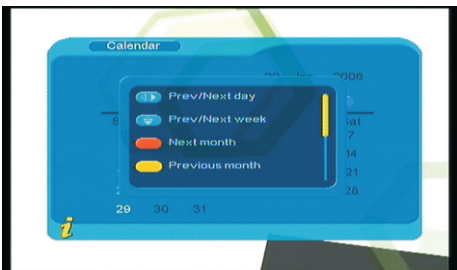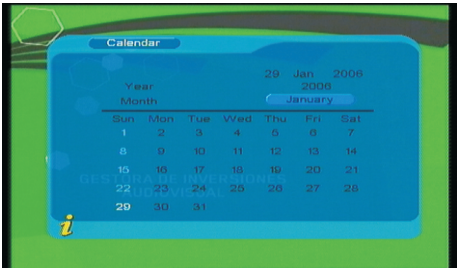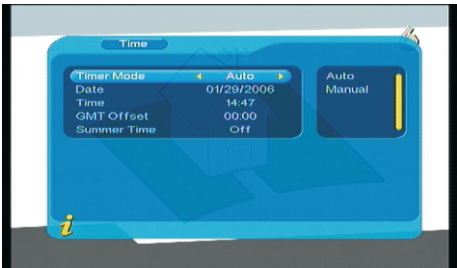

Replace battery

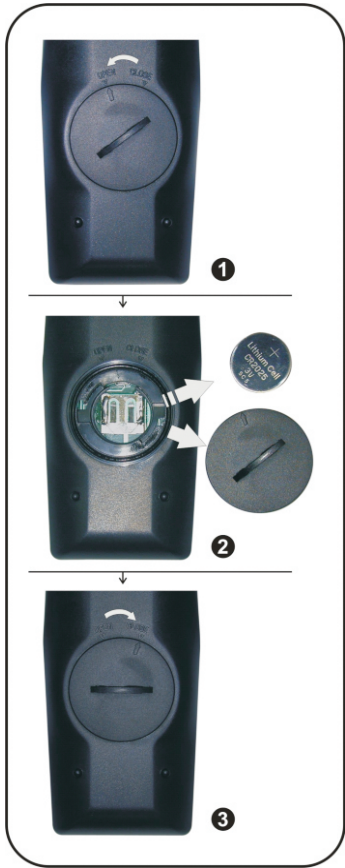

- 1. Open the battery cap**
Turn around the battery cap to the open mark, and take the battery out from the base (See figure 1)
- 2. Replace battery**
Ensure the anode (Positive) and cathode (Negative) be put in the correct side. Note: Do not lose the waterproof rubber seal.
- 3. Close the battery cap**
Turn around the battery cap to the close mark (See figure 3)

Dimension	175(L) ×52 (W)×10 (H)
Weight	70g ±5g

MENU Adjust Settings

Press MENU to enter the setup modes. Press EXIT to go back or exit.

PICTURE

BRIGHT: Press the ◀ ▶ buttons adjust the brightness of the screen.

CONTRAST: adjust the contrast of the screen.

COLOR: adjust the color of the screen.

PICTURE



BRIGHT	50
CONTRAST	50
COLOR	50

AUDIO

VOLUME: Press the ◀ ▶ buttons adjust the volume of sound.

AUDIO



VOLUME	50
--------	----

FUNCTION

ENGLISH: Press the ◀ ▶ buttons to choose the OSD languages; include English, Spanish and Portuguese.

MODE: Press the ◀ ▶ buttons select 16 : 9 / 4 : 3 display formats.

RESET: Press the ▶ buttons reset the picture parameters of screen.

FUNCTION



ENGLISH	◀▶
MODE	16:9
RESET	▶

TV

TV setup provides convenient TV input mode, you can via menu (MENU->Digital TV->Configuration -> TV) enter TV set

Display Mode

TV mode can change the mode of the output video, you can adjust TV mode, can be set as Auto, PAL, NTSC.

Aspect Ratio

Video output mode can change the mode of video output, you can adjust TV mode, can be set as 16: 9 / 4: 3.

Video Output

Video Output mode can change the mode of video output, you can adjust TV mode, can be set as CVBS, RGB, P-YUV, P-RGB, S-Video

Brightness

If the brightness is not proper during watching, you can adjust the current brightness to be a proper one, can be set as: 0%, 10%, 20%, 30%, 40%, 50%, 60%, 70%, 80%, 90% or 100.

Contrast





You can set system contrast via Contrast option, can be set as: 0%, 10%, 20%, 30%, 40%, 50%, 60%, 70%, 80%, 90% or 100.

HUE


Adjust the system hue, can be set as: -6, -5, -4, -3, -2, -1, 0, 1, 2, 3, 4, 5 or 6.

Saturation

Adjust system saturation, can be set as: 0-12.

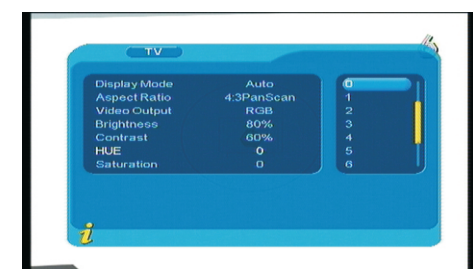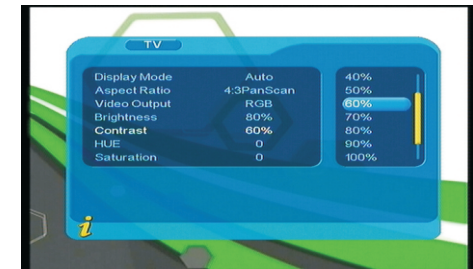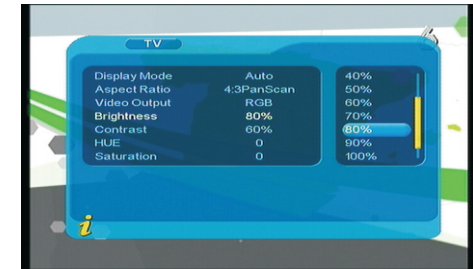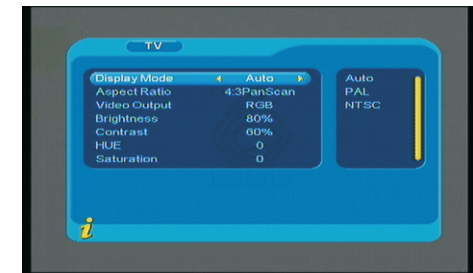


(4)To delete all Carriers and delete all TV and Radio channel, press UP/DOWN key to move the cursor to ALL Carriers option, Press OK key, then the system will hint with “Delete all Carriers?”dialogue box, press LEFT/RIGHT key to choose “Yes” or “No”, press OK key to confirm .

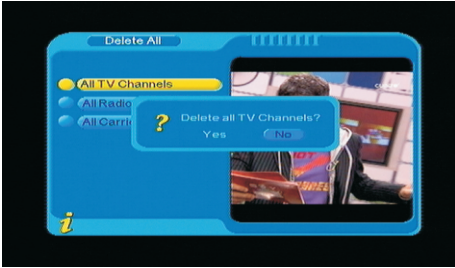

■ Configuration

OSD

Configuration provides individualized system setup function, you can configure the system according to your own hobby and demand. You can enter Configuration menu via the menu(MENU>Digita TV>Configuration)

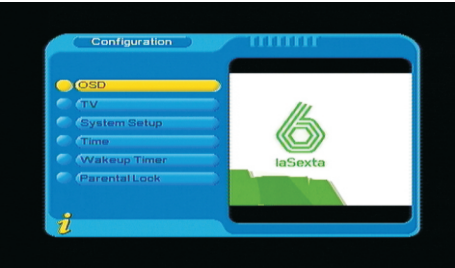


(1)OSD Language option: The system has the user interface supporting a couple of languages, you can set language via OSD Language option:

[a] Move the cursor onto OSD Language option , Press RIGHT key to enter OSD Language List.

[2] Press LEFT/DOWN key choose language;


[3] Press OK key to confirm system interface language selection, then the setting is effective, and then the interface language turns into the currently chosen language, the cursor can move onto OSD Language option on the left.

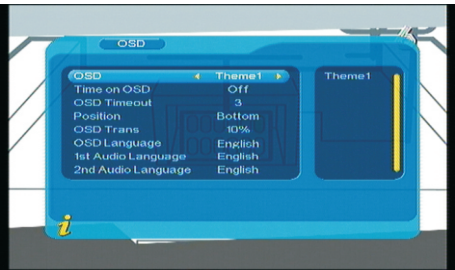

(2)1st Audio Language option: Press RIGHT key to enter the currently supported Audio Language list, in the Audio Language list, press UP/DOWN key to choose language, press OK key to confirm.

(3)2nd Audio Language option: Press RIGHT key to enter the currently supported Audio Language list, in the Audio Language list, press UP/DOWN key to choose language, press OK key to confirm.

(4)Press OK key to confirm the editing action in OSD menu, the system will hint with “Update succeeds” and then return to the previous menu .

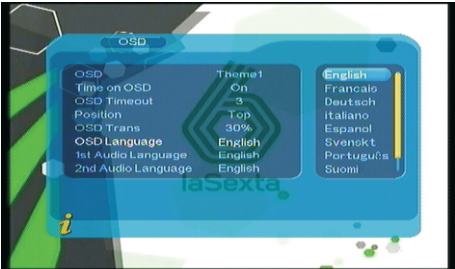

SYSTEM

C-SYS: Display the color system. Don't adjust.

S-SYS: Display the sound system. Don't adjust.

SWAP: Goes back to the previously viewed channel.

COPY: Copy the channel.

SYSTEM



C-SYS
S-SYS
SWAP
COPY

PAL
DK
0 ↔ -
0 ↔ -

PRESET

For analogue stations & sky

AUTO SEARCH: Auto-search the TV channels. Right cursor button search TV channels.

Manual SEARCH: manual-search the TV channels.

FINE: Micro-adjust the current TV signal.

POSITION: Display the current channel number.

SKIP: If selected, skip the selected channel number when use CH+/CH- select channel. Select ON means skip; select OFF means no skip.

PRESET



AUTO-SEARCH
SEARCH
FINE
PROGRAM
SKIP

▶
◀▶
◀▶
0
OFF

VERSION

Show the IC version.

VERSION




03A.1.02.04
DTOS403H102 A
Jul 01 2011

DVB-T function



■ Main MENU(MEDIA MENU)

Main Menu

In Main Menu, press UP/DOWN key to choose Digital TV option and then Press "OK" key once to enter Digital TV menu.

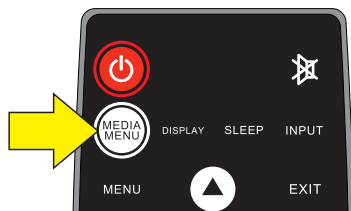

Press the button, into the Main Menu

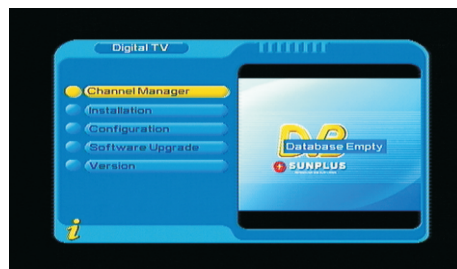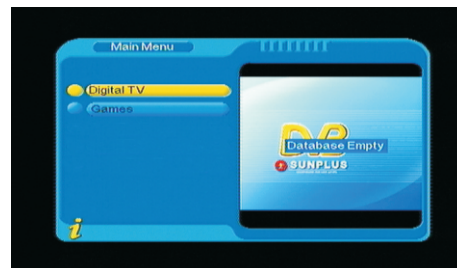


■ Installation

Installation



There are three kinds of Installation mode as follow:

- (1)Area Search: searching programs by scan area.
- (2)Manual Search
- (3)Auto Search

You can enter into parameter "installation page" via input password digitals(default password is "0000"), As shown in the figure below:

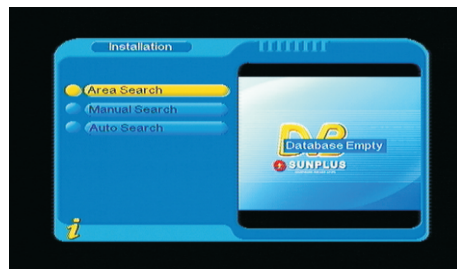

- (3)Press the red key ZOOM of the remote controller to enter Add Channel menu. Under Add Channel menu, there are 6 parameters for adding one channel as follows:
[1] Area Name: For Area Name, press the RIGHT key of the remote controller to enter the Area Name list on the right, then press UP/DOWN key to choose area name, press OK key to confirm.
[2] Carrier: Press LEFT/RIGHT key to choose.
[3] Channel Name: Press LEFT/RIGHT key to enter Rename Channel page.
[4] Audio PID, Video PID, PCR PID, Press 0-9 number key to revise values;
[5] Press OK key to confirm the adding, the system will hint with "Update succeeds" and return to Edit Channel menu;
(6).Press EXIT key to return to Edit Channel page.
- 4.Press the yellow 3D key of the remote controller to enter Rename Channel menu. The operation for this menu is as that of for Add Channel page.

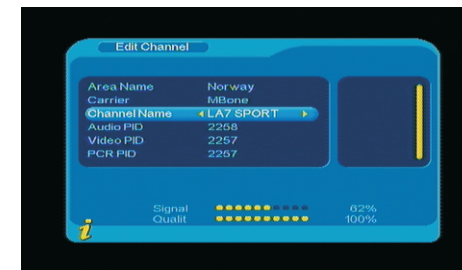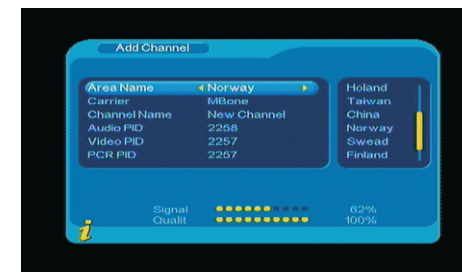


Delete All

If you do not like one or some channels, you can delete it/them in Channel Organizer menu, but, if you do not like all TV or Radio, you can enter Delete All menu to choose to delete all TV, RADIO, Carriers.

- (1)Under Channel Manager menu, press UP/DOWN key to choose Delete All option, press OK key again, then the system will hint with the dialogue box of inputting password which is defaulted as "0000", input the proper password via the 0—9 number key of the remote controller, then enter Delete All menu.
- (2)To delete all TV channels, press UP/DOWN key to move the cursor to ALL TV Channels option, press OK key, then the system will hint with "Delete all TV Channels?" dialogue box. Press LEFT/RIGHT key to choose "Yes" or "No", press OK key to confirm ,
- (3)To delete all RADIO channel, press UP/DOWN key move the cursor to ALL Radio Channels option,press OK key, then the system will hint with "Delete all Radio Channels?" dialogue box , press LEFT/RIGHT key to choose "Yes" or "No",press OK key to confirm.



(4) Press UP/DOWN key choose Type, Press LEFT/RIGHT key to set Sorting Parameters.
 (5) After sorting is set, to realize channel sorting, press OK key, then the system will hint with the dialogue box "Are you sure?"
 To choose "Yes" to confirm, you can see the programs in the program list; to choose "No" to cancel, you can return to Channel Sorting page;
 (6) Press RETURN key to exit Channel Sorting page.

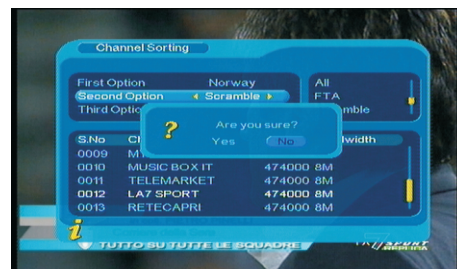

Channel Grouping

Group channels according to Movies, Sport, Music, Kids, Fashion etc.
 (1) You can enter the page As shown in the figure via "MENU>Digita TV> Channel Manager> Channel Grouping":
 (2) It will pop up and dialogue box prompting that "Channel not available" when there are no programs in database to enter into, and it will not enter into channel grouping page.
 (3) Press UP/DOWN key to choose the line where the channel to be grouped is in, then press the number keys 1-8 on the remote controller to set different channel grouping.
 (4) After channel is edited, when EXIT key is pressed to exit the menu, if actual channel editing action exists, the system will carry out channel grouping renewal, with the hint of "Update succeeds"



Edit Channel

Have such operations as Add, Delete and Rename to channels.
 (1) You can enter the page as shown in the figure below via "MENU->Digita TV-> Channel Manager-> Edit Channel":
 (2) It will pop up and dialogue box prompting that "No Carriers" when there are no programs in database to enter into, and it will not enter into ADD-Edit Channel page.



Channel Search


Area search is a kind of intelligent and convenient mode of programs searching, which covers programs of all frequent points of target countries or regions. As shown in the figure below:

- (1) You can move the cursor to "area search" via press "UP/DOWN" key under "installation menu", then press "enter" to enter into area searching page.
- (2) After entering into area search page, system will scan all programs one by one under frequency points of current countries or regions selected automatically.
- (3) During scanning, press "EXIT" key to stop and exit scanning.
- (4) If any program is detected and the scanning process is finished, system will exit the scanning page and save the program, at the same time return to the "installation menu" and to play them in vpp window automatically.



Manual Search

- (1) You can move the cursor to "area search" via press "UP/DOWN" key under "installation menu", then press "OK" to enter into area searching page.
- (2) Prior manual scan, you need to configure relevant parameters including:
 - [a] Freq(KHz): the default frequency is 474000KHz, you can input relevant digital to modify it;
 - [b] BandWidth: the default value of bandwidth is 64MHz. while you can set it to 6MHz, 7MHz, 8MHz.
- (3) Press "OK" key after configuration of parameters to start manual scan.
- (4) If any program is detected and the scanning process is finished, system will exit the scanning page and save the program, at the same time return to the "installation menu" and to play them in vpp window automatically.

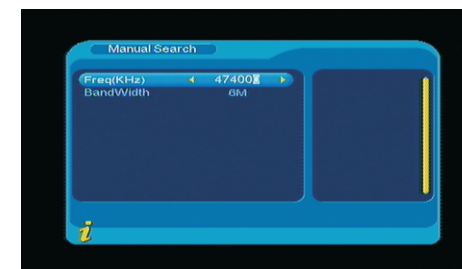


Auto Search

You can search the programs of any channel.
(1) You can move the cursor to “area search” via press “UP/DOWN” key under “installation menu”, then press “OK” to enter into area searching page.

(2) Prior to auto searching, you need to configure relevant parameters including:
[a] Start Freq (KHz): the default frequency is 474000 KHz. You can input relevant digitals to modify it;
[b] End Freq (KHz): the default frequency is 474000 KHz. You can input relevant digitals to modify it;
[c] Band Width: the default value of bandwidth is 6MHz. while you can set it to 6MHz, 7MHz, and 8MHz.

3. Press “OK” key after configuration of parameters to start manual scan.
4. If any program is detected and the scanning process is finished, system will exit the scanning page and save the program, at the same time return to the “installation menu” and to play them in vpp window automatically.

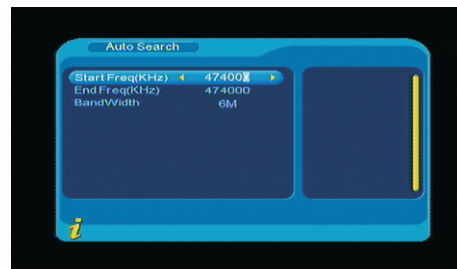


(3) Channel Organizer menu includes: Favorite Channel, Delete Channel, Skip Channel, Lock Channel. Press UP/DOWN key to choose the line where Favorite Channel is, then press the 4-color key on the remote controller: press the red ZOOM key to set and cancel Favorite Channel, the green A-B key to set or cancel Delete Channel, the yellow 3D key to set or cancel Skip Channel, the blue ANGLE key to set or cancel Lock Channel; After setting, corresponding figure will appear.

(4) To rename channel, press UP/DOWN key to choose the line where the channel to be renamed is, press LEFT/RIGHT key to enter the page to rename the channel.

(5) After program editing, to edit the program, press ENTER key; to set or cancel Lock Program, the system will hint to input “0000”; to set Delete Program, the system will hint to choose dialogue box “Do you want to delete the selected items?”, Press LEFT/RIGHT key to choose, choose “Yes” to delete the program chosen, “No” to cancel.

(5) Press RETURN key to exit Channel Organizer page.

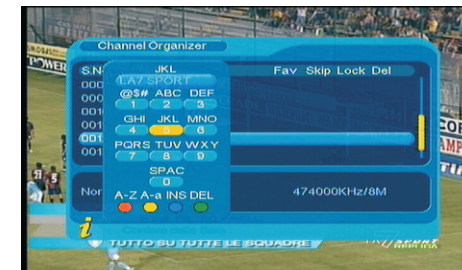


Channel Manager

Channel Organizer

Channel organizer page includes favorite channels, channel deleting, moving, locking and rename.

(1) You can enter the page as shown in the figure below via “MENU>Digital TV> Channel Manager> Channel Organizer”

(2) It will pop up and dialogue box prompting that “Channel not available” when there are no channels in database to enter into, and it will not enter into channel organizer page.

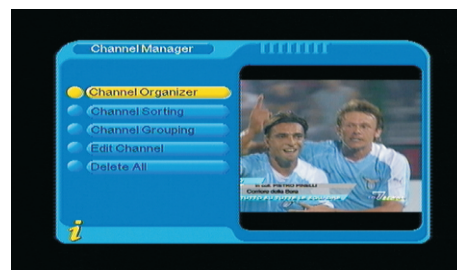

Channel Sorting

The channels shall be listed according to certain sequence so that the user can easily find them.

(1) you can enter the page As shown in the figure below via “MENU>Digita TV> Channel Manager > Channel Sorting”:

(2) It will pop up and dialogue box prompting that “Channel not available” when there are no programs in database to enter into, and it will not enter into channel sorting page.

(3) Before sorting, the type of sorting shall be set, including the following items:

[a]. First Option: choose the programs to be sorted via the selection area.

[b]. Second Option: Press FTA (free of charge), Scramble (encrypted), ALL Free and Encrypted Channels.

[c]. Third Option: According to alphabetic order A-Z, or Z-A.

